




Opis produktu

2020 US-500

Flush Mounted Inserts with N-terminal 10 A

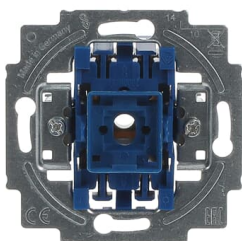

Ogólne informacje

Typ produktu	2020 US-500
Kod zamówieniowy	2CKA001413A0574
Numer EAN	4011395046401
Opis katalogowy	Flush Mounted Inserts with N-terminal 10 A
Opis	With N terminal.

Instalacja

Instrukcje i podręczniki	No document needed
Typ montażu	Flush Mounted
Rodzaj mocowania	Mounting with Claw Mounting with Screw
Modular Components Included	Flush Mounted Insert with Mounting Plate

Normy środowiskowe

Stopień ochrony	IP20
-----------------	------

Dane techniczne

Arkusz danych, informacja techniczna	No document needed
Konfiguracja styków	1 NO, 0 NC
Liczba biegunów	1P+N
Typ dźwigni	Rocker
Typ produktu ABB	with N-terminal
Typ zacisku	Screw Terminals

Elektryczność

Napięcie znamionowe (U_r)	250 V
Prąd znamionowy (I_n)	10 A

Konstrukcja

Design Range	Platform 63 Busch-Duro 2000 SI Reflex SI Busch-art linear future linear Busch-axcent solo Pure Stainless Steel carat Busch-Dynasty Allwetter 44 (IP 44) alpha
Design Range Variant	Busch-Duro 2000 SI Busch-Duro 2000 SI Linear Reflex SI Reflex SI Linear Busch-art linear Busch-art linear - with Decor Ring Busch-art linear - pur future future linear Busch-axcent Busch-axcent pur alpha nea alpha exclusive
Wykończenie pokrywy	Untreated Matt
Materiał	Thermoplastic Duroplast
Zapewnione miejsce na etykiety	Without Label Space

Wymiary

Szerokość netto	71 mm
Wysokość netto	71 mm
Głębokość / długość netto	40 mm
Masa netto	60 g
Głębokość zabudowy (t_2)	25 mm

)

Zgodność materiału

Dane RoHS	2CKA200000E0367
Status RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Deklaracja REACH	2CKA309999E9999
REACH Information	False - does not contain substances > 0.1 mass percentage
REACH Date	20250218
Szablon raportowania CMRT	9AKK108468A3363
Kategoria WEEE	5. Small Equipment (No External Dimension More Than 50 cm)
WEEE B2C / B2B	Business To Consumer

Certyfikaty i deklaracje

Deklaracja zgodności UE	2CKA100000E0273
Deklaracja zgodności - UKCA	2CKA400000E0426

Klasyfikacje i standardy zewnętrzne

ETIM 9	EC000029 - Push button
ETIM 10	EC000029 - Push button
eClass	V11.0 : 27144044

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA002148A0120	Extension of Claws	2148	1	sztuka
2CKA001731A1992	Accessories for Switch/push button, Single rocker alpine white - Reflex SI	2506-214-500	1	piece
2CKA001731A1891	Mechanical Controls for Switch/push button, Single rocker alpine white - Reflex SI	2506-214-507	1	piece
2CKA001731A1007	Mechanical Controls for Switch/push button, Single rocker black - Reflex SI	2506-215	1	sztuka
2CKA001731A4012	Rocker for Switch/push button, Single rocker red - Reflex SI	2506-217-101	1	sztuka
2CKA001731A2001	Accessories for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2506-212-500	1	piece
2CKA001731A1889	Mechanical Controls for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2506-212-507	1	piece
2CKA001751A3074	Accessories for Switch/push button, Single rocker studio white - Platform 63	1786-84-500	1	piece
2CKA001751A3337	Rocker for Switch/push button, Single rocker studio white - Busch-art linear	1786-44G-500	1	piece
2CKA001751A3077	Mechanical Controls for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1786-866-500	1	piece
2CKA001731A1593	Rocker for Switch/push button, Single rocker alpine white - Allwetter 44 (IP 44)	2106-34	1	sztuka
2CKA001731A3991	Rocker for Switch/push button, Single rocker alpine white - Allwetter 44 (IP 44)	2106-34-500	1	piece
2CKA001751A3145	Rocker for Switch/push button, Single rocker red - Platform 63	1786-12-82	1	sztuka

2CKA001751A3079	Mechanical Controls for Switch/push button, Single rocker anthracite - Platform 63	1786-81-500	1	piece
2CKA001751A3083	Accessories for Switch/push button, Single rocker ivory white - Platform 63	1786-82-500	1	piece
2CKA001751A3338	Rocker for Switch/push button, Single rocker studio white matt - Busch-art linear	1786-44M-500	1	piece
2CKA001751A3340	Rocker for Switch/push button, Single rocker black matt - Busch-art linear	1786-45M-500	1	piece
2CKA001751A3075	Accessories for Switch/push button, Single rocker aluminium silver - Platform 63	1786-83-500	1	piece
2CKA001751A3089	Accessories for Switch/push button, Single rocker studio white matt - Platform 63	1786-884-500	1	piece
2CKA001751A3094	Accessories for Switch/push button, Single rocker black matt - Platform 63	1786-885-500	1	piece
2CKA001731A1962	Rocker for Switch/push button, Single rocker brown - Allwetter 44 (IP 44)	2106-31	1	sztuka
2CKA001731A1775	Rocker for Switch/push button, Single rocker white - Allwetter 44 (IP 44)	2106-32	1	sztuka
2CKA001731A1997	Rocker for Switch/push button, Single rocker white - Allwetter 44 (IP 44)	2106-32-500	1	piece
2CKA001731A1963	Rocker for Switch/push button, Single rocker aluminium silver - Allwetter 44 (IP 44)	2106-33	1	sztuka
2CKA001731A1668	Rocker for Switch/push button, Single rocker anthracite - Allwetter 44 (IP 44)	2106-35	1	sztuka
2CKA001751A3081	Rocker for Switch/push button, Single rocker ivory - alpha	1786-22G-500	1	piece
2CKA001751A3078	Rocker for Switch/push button, Single rocker studio white - alpha	1786-24G-500	1	piece
2CKA001751A3090	Rocker for Switch/push button, Single rocker platinum - alpha	1786-20-500	1	piece
2CKA001751A3086	Rocker for Switch/push button, Single rocker bronze - alpha	1786-21-500	1	piece
2CKA001751A3080	Rocker for Switch/push button, Single rocker palladium - alpha	1786-260-500	1	piece
2CKA001751A3085	Rocker for Switch/push button, Single rocker titanium - alpha	1786-266-500	1	piece
2CKA001751A3093	Mechanical Controls for Switch/push button, Single rocker grey metallic - Platform 63	1786-803-500	1	piece
2CKA001434A0448	Rocker with neutral symbol, screwable Neutral symbol for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2546-212	1	sztuka
2CKA001434A0554	Rocker with neutral symbol, screwable Neutral symbol for Switch/push button, Single rocker alpine white - Reflex SI	2546-214	1	sztuka
2CKA001731A0942	Rocker with legend Symbol "bell" for Switch/push button, Single rocker alpine white - Reflex SI	2520 KI-214	1	sztuka
2CKA001731A1996	Mechanical Controls Symbol "light" for Switch/push button, Single rocker alpine white - Reflex SI	2520 LI-214-500	1	piece
2CKA001731A0959	Rocker with legend Symbol "key" for Switch/push button, Single rocker alpine white - Reflex SI	2520 TR-214	1	sztuka
2CKA001731A0280	Rocker with legend Symbol "bell" for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2520 KI-212	1	sztuka
2CKA001731A0272	Rocker with legend Symbol "light" for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2520 LI-212	1	sztuka
2CKA001731A0298	Rocker with legend Symbol "key" for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2520 TR-212	1	sztuka

2CKA001751A3180	Rocker with legend Symbol "bell" for Switch/push button Single rocker studio white - Platform 63	2520 KI-84-500	1	piece
2CKA001751A3190	Mechanical Controls Symbol "light" for Switch/push button, Single rocker studio white - Platform 63	2520 LI-84-500	1	piece
2CKA001751A3199	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - Platform 63	2520 TR-84	1	sztuka
2CKA001751A3341	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white - Busch-art linear	2520 KI-44G	1	piece
2CKA001751A3345	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white - Busch-art linear	2520 LI-44G	1	piece
2CKA001751A3349	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - Busch-art linear	2520 TR-44G	1	piece
2CKA001751A3181	Rocker with legend Symbol "bell" for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	2520 KI-866	1	sztuka
2CKA001751A3191	Rocker with legend Symbol "light" for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	2520 LI-866	1	sztuka
2CKA001751A3200	Rocker with legend Symbol "key" for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	2520 TR-866	1	sztuka
2CKA001751A3176	Rocker with legend Symbol "bell" for Switch/push button, Single rocker anthracite - Platform 63	2520 KI-81	1	sztuka
2CKA001751A3177	Rocker with legend Symbol "bell" for Switch/push button, Single rocker ivory white - Platform 63	2520 KI-82	1	sztuka
2CKA001751A3186	Rocker with legend Symbol "light" for Switch/push button, Single rocker anthracite - Platform 63	2520 LI-81	1	sztuka
2CKA001751A3187	Rocker with legend Symbol "light" for Switch/push button, Single rocker ivory white - Platform 63	2520 LI-82	1	sztuka
2CKA001751A3196	Rocker with legend Symbol "key" for Switch/push button, Single rocker anthracite - Platform 63	2520 TR-81	1	sztuka
2CKA001751A3197	Rocker with legend Symbol "key" for Switch/push button, Single rocker ivory white - Platform 63	2520 TR-82	1	sztuka
2CKA001751A3342	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white matt - Busch-art linear	2520 KI-44M	1	piece
2CKA001751A3344	Rocker with legend Symbol "bell" for Switch/push button, Single rocker black matt - Busch-art linear	2520 KI-45M	1	piece
2CKA001751A3346	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white matt - Busch-art linear	2520 LI-44M	1	piece
2CKA001751A3348	Rocker with legend Symbol "light" for Switch/push button, Single rocker black matt - Busch-art linear	2520 LI-45M	1	piece
2CKA001751A3350	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white matt - Busch-art linear	2520 TR-44M	1	piece
2CKA001751A3352	Rocker with legend Symbol "key" for Switch/push button, Single rocker black matt - Busch-art linear	2520 TR-45M	1	piece

2CKA001751A3178	Rocker with legend Symbol "bell" for Switch/push button, Single rocker aluminium silver - Platform 63	2520 KI-83	1	sztuka
2CKA001751A3182	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white matt - Platform 63	2520 KI-884	1	sztuka
2CKA001751A3183	Rocker with legend Symbol "bell" for Switch/push button, Single rocker black matt - Platform 63	2520 KI-885	1	sztuka
2CKA001751A3188	Rocker with legend Symbol "light" for Switch/push button, Single rocker aluminium silver - Platform 63	2520 LI-83	1	sztuka
2CKA001751A3192	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white matt - Platform 63	2520 LI-884	1	sztuka
2CKA001751A3193	Rocker with legend Symbol "light" for Switch/push button, Single rocker black matt - Platform 63	2520 LI-885	1	sztuka
2CKA001751A3198	Rocker with legend Symbol "key" for Switch/push button, Single rocker aluminium silver - Platform 63	2520 TR-83	1	sztuka
2CKA001751A3201	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white matt - Platform 63	2520 TR-884	1	sztuka
2CKA001751A3202	Rocker with legend Symbol "key" for Switch/push button, Single rocker black matt - Platform 63	2520 TR-885	1	sztuka
2CKA001751A3175	Rocker with legend Symbol "bell" for Switch/push button, Single rocker grey metallic - Platform 63	2520 KI-803	1	sztuka
2CKA001751A3185	Rocker for Switch/push button, Single rocker grey metallic - Platform 63	2520 LI-803	1	sztuka
2CKA001751A3195	Rocker Symbol "key" for Switch/push button, Single rocker grey metallic - Platform 63	2520 TR-803	1	sztuka
2CKA001731A0520	Rocker with labelling field for Switch/push button, Single rocker alpine white - Reflex SI	2506 N-214	1	sztuka
2CKA001731A0561	Rocker with labelling field for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2506 N-212	1	sztuka
2CKA001731A4021	Rocker with labelling field for Switch/push button, Single push button studio white - Busch-art linear	1764 N-44G	1	piece
2CKA001731A1643	Rocker with labelling field for Switch/push button, Single rocker alpine white - Allwetter 44 (IP 44)	2106 N-34	1	sztuka
2CKA001731A4022	Rocker with labelling field for Switch/push button, Single push button studio white matt - Busch-art linear	1764 N-44M	1	piece
2CKA001731A4024	Rocker with labelling field for Switch/push button, Single push button black matt - Busch-art linear	1764 N-45M	1	piece
2CKA001731A1960	Rocker with labelling field for Switch/push button, Single rocker brown - Allwetter 44 (IP 44)	2106 N-31	1	sztuka
2CKA001731A1825	Rocker with labelling field for Switch/push button, Single rocker white - Allwetter 44 (IP 44)	2106 N-32	1	sztuka
2CKA001731A1961	Rocker with labelling field for Switch/push button, Single rocker aluminium silver - Allwetter 44 (IP 44)	2106 N-33	1	sztuka
2CKA001731A1718	Rocker with labelling field for Switch/push button, Single rocker anthracite - Allwetter 44 (IP 44)	2106 N-35	1	sztuka

2CKA001751A2540	Rocker with labelling field for Switch/push button, Single rocker ivory - alpha	1781-22G	1	sztuka
2CKA001751A2292	Rocker with labelling field for Switch/push button, Single rocker studio white - alpha	1781-24G	1	sztuka
2CKA001751A1666	Rocker with labelling field for Switch/push button, Single rocker platinum - alpha	1781-20	1	sztuka
2CKA001751A1757	Rocker with labelling field for Switch/push button, Single rocker bronze - alpha	1781-21	1	sztuka
2CKA001751A2833	Rocker with labelling field for Switch/push button, Single rocker titanium - alpha	1781-266	1	sztuka
2CKA001784A0545	Illumination set for Switch/push button Orange Neon lamp, 0.4 mA, 230 V red	8350	1	sztuka
2CKA001784A0552	Illumination set for Switch/push button Orange Neon lamp, 0.4 mA, 230 V red	8360	1	sztuka
2CKA001784A0779	Illumination set for Switch/push button White LED, 0.5 mA, 230 V red	8380-10	1	sztuka
2CKA001784A0788	Illumination set for Switch/push button White LED, 0.5 mA, 230 V red	8390-10	1	sztuka
2CKA001784A0782	Illumination set for Switch/push button Red LED, 0.5 mA, 230 V red	8380-12	1	sztuka
2CKA001784A0791	Illumination set for Switch/push button Red LED, 0.5 mA, 230 V red	8390-12	1	sztuka
2CKA001784A0785	Illumination set for Switch/push button Blue LED, 0.5 mA, 230 V red	8380-17	1	sztuka
2CKA001784A0794	Illumination set for Switch/push button Blue LED, 0.5 mA, 230 V red	8390-17	1	sztuka
2CKA001784A0560	Illumination set for Switch/push button Orange Neon lamp, 1 mA, 230 V yellow	8352	1	sztuka
2CKA001784A0586	Illumination set for Switch/push button Orange Neon lamp, 1 mA, 230 V yellow	8362	1	sztuka
2CKA001784A0578	Illumination set for Switch/push button Orange Neon lamp, 2 mA, 230 V white	8353	1	sztuka
2CKA001784A0594	Illumination set for Switch/push button Orange Neon lamp, 2 mA, 230 V white	8363	1	sztuka
2CKA001784A0780	Illumination set for Switch/push button White LED, 1 mA, 230 V yellow	8382-10	1	sztuka
2CKA001784A0789	Illumination set for Switch/push button White LED, 1 mA, 230 V yellow	8392-10	1	sztuka
2CKA001784A0783	Illumination set for Switch/push button Red LED, 1 mA, 230 V yellow	8382-12	1	sztuka
2CKA001784A0792	Illumination set for Switch/push button Red LED, 1 mA, 230 V yellow	8392-12	1	sztuka
2CKA001784A0786	Illumination set for Switch/push button Blue LED, 1 mA, 230 V yellow	8382-17	1	sztuka
2CKA001784A0795	Illumination set for Switch/push button Blue LED, 1 mA, 230 V yellow	8392-17	1	sztuka
2CKA001784A0781	Illumination set for Switch/push button White LED, 2 mA, 230 V white	8383-10	1	sztuka
2CKA001784A0790	Illumination set for Switch/push button White LED, 2 mA, 230 V white	8393-10	1	sztuka
2CKA001784A0784	Illumination set for Switch/push button Red LED, 2 mA, 230 V white	8383-12	1	sztuka
2CKA001784A0793	Illumination set for Switch/push button Red LED, 2 mA, 230 V white	8393-12	1	sztuka
2CKA001784A0787	Illumination set for Switch/push button Blue LED, 2 mA, 230 V white	8383-17	1	sztuka
2CKA001784A0796	Illumination set for Switch/push button Blue LED, 2 mA, 230 V white	8393-17	1	sztuka
2CKA001784A0164	Illumination set for Switch/push button White Incandescent lamp, 40 mA, 8 V AC/DC	8344-1	1	sztuka

2CKA001784A0289	Illumination set for Switch/push button White Incandescent lamp, 40 mA, 12 V	8345-1	1	sztuka
2CKA001784A0032	Illumination set for Switch/push button White Incandescent lamp, 22 mA, 24 V AC/DC	8337-1	1	sztuka
2CKA001784A0313	Illumination set for Switch/push button Orange LED, 1 mA, 8...15 V AC/DC	8327-1	1	sztuka
2CKA001784A0651	Illumination set for Switch/push button Red Incandescent lamp, 40 mA, 8 V AC/DC orange	8367	1	sztuka
2CKA001784A0636	Illumination set for Switch/push button Orange Incandescent lamp, 40 mA, 12 V orange	8366	1	sztuka
2CKA001784A0610	Illumination set for Switch/push button Orange Incandescent lamp, 22 mA, 24 V AC/DC orange	8365	1	sztuka
2CKA001751A3151	Mechanical Controls with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 N-84-500	1	piece
2CKA001751A3091	Mechanical Controls with Small Red Calotte for Switch/push button, Single rocker studio white - Platform 63	1789-84-500	1	piece
2CKA001751A3365	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 N-44G-500	1	piece
2CKA001751A3409	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 NWD-44G	1	piece
2CKA001751A3152	Rocker with Small Transparent Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 N-866	1	sztuka
2CKA001751A2957	Rocker with Small Red Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789-866	1	sztuka
2CKA001751A3147	Rocker with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 N-81	1	sztuka
2CKA001751A3148	Rocker with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 N-82	1	sztuka
2CKA001751A2928	Rocker with Small Red Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789-81	1	sztuka
2CKA001751A2813	Rocker with Small Red Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789-82	1	sztuka
2CKA001751A3366	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 N-44M-500	1	piece
2CKA001751A3368	Rocker with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 N-45M-500	1	piece
2CKA001751A3410	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 NWD-44M	1	piece
2CKA001751A3412	Rocker with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 NWD-45M	1	piece
2CKA001751A3149	Rocker with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 N-83	1	sztuka
2CKA001751A3153	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 N-884	1	sztuka
2CKA001751A3154	Rocker with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 N-885	1	sztuka

2CKA001751A2945	Rocker with Small Red Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789-83	1	sztuka
2CKA001751A3033	Rocker with Small Red Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789-884	1	sztuka
2CKA001751A3047	Rocker with Small Red Calotte for Switch/push button, Single rocker black matt - Platform 63	1789-885	1	sztuka
2CKA001751A2508	Rocker for Switch/push button, Single rocker ivory - alpha	1787-22G	1	sztuka
2CKA001751A2177	Rocker for Switch/push button, Single rocker studio white - alpha	1787-24G	1	sztuka
2CKA001751A2490	Rocker with Small Red Calotte for Switch/push button, Single rocker ivory - alpha	1789-22G	1	sztuka
2CKA001751A2102	Rocker with Small Red Calotte for Switch/push button, Single rocker studio white - alpha	1789-24G	1	sztuka
2CKA001751A2045	Rocker for Switch/push button, Single rocker platinum - alpha	1787-20	1	sztuka
2CKA001751A2052	Rocker for Switch/push button, Single rocker bronze - alpha	1787-21	1	sztuka
2CKA001751A2824	Rocker for Switch/push button, Single rocker palladium - alpha	1787-260	1	sztuka
2CKA001751A2835	Rocker for Switch/push button, Single rocker titanium - alpha	1787-266	1	sztuka
2CKA001751A1625	Rocker with Small Red Calotte for Switch/push button, Single rocker platinum - alpha	1789-20	1	sztuka
2CKA001751A1716	Rocker with Small Red Calotte for Switch/push button, Single rocker bronze - alpha	1789-21	1	sztuka
2CKA001751A2825	Rocker with Small Red Calotte for Switch/push button, Single rocker palladium - alpha	1789-260	1	sztuka
2CKA001751A2836	Rocker with Small Red Calotte for Switch/push button, Single rocker titanium - alpha	1789-266	1	sztuka
2CKA001751A3146	Rocker with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 N-803	1	sztuka
2CKA001751A3013	Rocker with Small Red Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789-803	1	sztuka
2CKA001751A2754	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 KI-84	1	sztuka
2CKA001751A3084	Mechanical Controls Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 LI-84-500	1	piece
2CKA001751A2755	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 TR-84	1	sztuka
2CKA001751A3369	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 KI-44G	1	piece
2CKA001751A3373	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 LI-44G	1	piece
2CKA001751A3377	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 TR-44G	1	piece
2CKA001751A2959	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 KI-866	1	sztuka

2CKA001751A2958	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 LI-866	1	sztuka
2CKA001751A2960	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 TR-866	1	sztuka
2CKA001751A2932	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 KI-81	1	sztuka
2CKA001751A2746	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 KI-82	1	sztuka
2CKA001751A2931	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 LI-81	1	sztuka
2CKA001751A2745	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 LI-82	1	sztuka
2CKA001751A2933	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 TR-81	1	sztuka
2CKA001751A2747	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 TR-82	1	sztuka
2CKA001751A3370	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 KI-44M	1	piece
2CKA001751A3372	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 KI-45M	1	piece
2CKA001751A3374	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 LI-44M	1	piece
2CKA001751A3376	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 LI-45M	1	piece
2CKA001751A3378	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 TR-44M	1	piece
2CKA001751A3380	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 TR-45M	1	piece
2CKA001751A2952	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 KI-83	1	sztuka
2CKA001751A3030	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 KI-884	1	sztuka
2CKA001751A3044	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 KI-885	1	sztuka
2CKA001751A2951	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 LI-83	1	sztuka
2CKA001751A3031	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 LI-884	1	sztuka
2CKA001751A3045	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 LI-885	1	sztuka

2CKA001751A2953	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 TR-83	1	sztuka
2CKA001751A3032	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 TR-884	1	sztuka
2CKA001751A3046	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 TR-885	1	sztuka
2CKA001751A3015	Rocker with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 KI-803	1	sztuka
2CKA001751A3014	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 LI-803	1	sztuka
2CKA001751A3016	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 TR-803	1	sztuka
2CKA001751A2516	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker ivory - alpha	1789 LI-22G	1	sztuka
2CKA001751A2201	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white - alpha	1789 LI-24G	1	sztuka
2CKA001751A1633	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker platinum - alpha	1789 LI-20	1	sztuka
2CKA001751A1724	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker bronze - alpha	1789 LI-21	1	sztuka
2CKA001751A2828	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker palladium - alpha	1789 LI-260	1	sztuka
2CKA001751A2839	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker titanium - alpha	1789 LI-266	1	sztuka
2CKA001751A3161	Mechanical Controls Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 ST-84-500	1	piece
2CKA001751A3381	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 ST-44G	1	piece
2CKA001751A3162	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 ST-866	1	sztuka
2CKA001751A3157	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 ST-81	1	sztuka
2CKA001751A3158	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 ST-82	1	sztuka
2CKA001751A3382	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 ST-44M	1	piece
2CKA001751A3384	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 ST-45M	1	piece
2CKA001751A3159	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 ST-83	1	sztuka

2CKA001751A3163	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 ST-884	1	sztuka
2CKA001751A3164	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 ST-885	1	sztuka
2CKA001751A3156	Rocker with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 ST-803	1	sztuka
2CKA001731A0751	Rocker with labelling field for Switch/push button, Single rocker alpine white - Reflex SI	2510 N-214	1	sztuka
2CKA001731A1452	Rocker with labelling field for Switch/push button, Single rocker alpine white - Reflex SI	2510 NLI-214	1	sztuka
2CKA001731A0405	Mechanical Controls for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2510 N-212-500	1	piece
2CKA001731A1445	Rocker with labelling field for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2510 NLI-212	1	sztuka
2CKA001731A1877	Rocker with labelling field for Switch/push button, Single rocker studio white - Platform 63	1764 NLI-84	1	sztuka
2CKA001731A1953	Rocker with labelling field for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1764 NLI-866	1	sztuka
2CKA001731A4011	Rocker with labelling field for Switch/push button, Single rocker red - Platform 63	1764 NLI-12-82-101	1	sztuka
2CKA001731A4007	Rocker with labelling field for Switch/push button, Single rocker green - Platform 63	1764 NLI-13-82	1	sztuka
2CKA001731A1552	Rocker with labelling field for Switch/push button, Single rocker anthracite - Platform 63	1764 NLI-81	1	sztuka
2CKA001731A1876	Rocker with labelling field for Switch/push button, Single rocker ivory white - Platform 63	1764 NLI-82	1	sztuka
2CKA001731A1948	Rocker with labelling field for Switch/push button, Single rocker aluminium silver - Platform 63	1764 NLI-83	1	sztuka
2CKA001731A1985	Rocker with labelling field for Switch/push button, Single rocker studio white matt - Platform 63	1764 NLI-884	1	sztuka
2CKA001731A1982	Rocker with labelling field for Switch/push button, Single rocker black matt - Platform 63	1764 NLI-885	1	sztuka
2CKA001731A1858	Rocker with labelling field for Switch/push button, Single rocker ivory - alpha	1764 NLI-22G	1	sztuka
2CKA001731A1569	Rocker with labelling field for Switch/push button, Single rocker studio white - alpha	1764 NLI-24G	1	sztuka
2CKA001731A1975	Rocker with labelling field for Switch/push button, Single rocker grey metallic - Platform 63	1764 NLI-803	1	sztuka
2CKA001731A0900	Rocker with Red Calotte for Switch/push button, Single rocker alpine white - Reflex SI	2509-214	1	sztuka
2CKA001731A1995	Mechanical Controls with Red Calotte for Switch/push button, Single rocker alpine white - Reflex SI	2509-214-500	1	piece
2CKA001731A1994	Mechanical Controls for Switch/push button, Single rocker alpine white - Reflex SI	2520-214-500	1	piece
2CKA001731A0355	Mechanical Controls with Red Calotte for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2509-212-500	1	piece
2CKA001731A2000	Mechanical Controls for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2520-212-500	1	piece
2CKA001731A1916	Rocker open for red pull button calotte for Push switch, Pull cord studio white - Platform 63	1720-84	1	sztuka

2CKA001731A1954	Rocker open for red pull button calotte for Push switch, Pull cord stainless steel - Pure Stainless Steel	1720-866	1	sztuka
2CKA001731A1734	Rocker with red calotte with Red Calotte for Switch/push button, Single rocker alpine white - Allwetter 44 (IP 44)	2107-34	1	sztuka
2CKA001731A1635	Rocker for Switch/push button, Single rocker alpine white - Allwetter 44 (IP 44)	2120-34	1	sztuka
2CKA001731A1998	Mechanical Controls for Switch/push button, Single rocker alpine white - Allwetter 44 (IP 44)	2120-34-500	1	piece
2CKA001731A1914	Rocker open for red pull button calotte for Push switch, Pull cord anthracite - Platform 63	1720-81	1	sztuka
2CKA001731A1915	Rocker open for red pull button calotte for Push switch, Pull cord ivory white - Platform 63	1720-82	1	sztuka
2CKA001731A1949	Rocker open for red pull button calotte for Push switch, Pull cord aluminium silver - Platform 63	1720-83	1	sztuka
2CKA001731A1979	Rocker open for red pull button calotte for Push switch, Pull cord studio white matt - Platform 63	1720-884	1	sztuka
2CKA001731A1981	Rocker open for red pull button calotte for Push switch, Pull cord black matt - Platform 63	1720-885	1	sztuka
2CKA001731A1964	Rocker with red calotte with Red Calotte for Switch/push button, Single rocker brown - Allwetter 44 (IP 44)	2107-31	1	sztuka
2CKA001731A1833	Rocker with red calotte with Red Calotte for Switch/push button, Single rocker white - Allwetter 44 (IP 44)	2107-32	1	sztuka
2CKA001731A1965	Rocker with red calotte with Red Calotte for Switch/push button, Single rocker aluminium silver - Allwetter 44 (IP 44)	2107-33	1	sztuka
2CKA001731A1742	Rocker with red calotte with Red Calotte for Switch/push button, Single rocker anthracite - Allwetter 44 (IP 44)	2107-35	1	sztuka
2CKA001731A1968	Rocker for Switch/push button, Single rocker brown - Allwetter 44 (IP 44)	2120-31	1	sztuka
2CKA001731A1817	Rocker for Switch/push button, Single rocker white - Allwetter 44 (IP 44)	2120-32	1	sztuka
2CKA001731A1969	Rocker for Switch/push button, Single rocker aluminium silver - Allwetter 44 (IP 44)	2120-33	1	sztuka
2CKA001731A1700	Rocker with legend for Switch/push button, Single rocker anthracite - Allwetter 44 (IP 44)	2120-35	1	sztuka
2CKA001751A2751	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 H-84	1	sztuka
2CKA001751A3357	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 H-44G	1	piece
2CKA001751A2963	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 H-866	1	sztuka
2CKA001751A2929	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 H-81	1	sztuka
2CKA001751A2743	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 H-82	1	sztuka
2CKA001751A3358	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 H-44M	1	piece
2CKA001751A3360	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 H-45M	1	piece

2CKA001751A2955	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 H-83	1	sztuka
2CKA001751A3029	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 H-884	1	sztuka
2CKA001751A3043	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 H-885	1	sztuka
2CKA001751A2573	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker ivory - alpha	1789 H-22G	1	sztuka
2CKA001751A2375	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white - alpha	1789 H-24G	1	sztuka
2CKA001751A1690	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker platinum - alpha	1789 H-20	1	sztuka
2CKA001751A1781	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker bronze - alpha	1789 H-21	1	sztuka
2CKA001751A2826	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker palladium - alpha	1789 H-260	1	sztuka
2CKA001751A2837	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker titanium - alpha	1789 H-266	1	sztuka
2CKA001751A3019	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 H-803	1	sztuka
2CKA001731A1619	Rocker with legend Heizung with Red Calotte for Switch/push button, Single rocker alpine white - Allwetter 44 (IP 44)	2102 H-34	1	sztuka
2CKA001731A1956	Rocker with legend Heizung with Red Calotte for Switch/push button, Single rocker brown - Allwetter 44 (IP 44)	2102 H-31	1	sztuka
2CKA001731A1791	Rocker with legend Heizung with Red Calotte for Switch/push button, Single rocker white - Allwetter 44 (IP 44)	2102 H-32	1	sztuka
2CKA001731A1957	Rocker with legend Heizung with Red Calotte for Switch/push button, Single rocker aluminium silver - Allwetter 44 (IP 44)	2102 H-33	1	sztuka
2CKA001731A1684	Rocker with legend Heizung with Red Calotte for Switch/push button, Single rocker anthracite - Allwetter 44 (IP 44)	2102 H-35	1	sztuka
2CKA001725A1536	Cover frame 1-gang alpine white - Reflex SI	2511-214-500	1	piece
2CKA001725A1464	Cover frame 1-gang alpine white - Reflex SI	2511-214-507	1	piece
2CKA001725A1552	Cover frame 1-gang white - Busch-Duro 2000 SI	2511-212-500	1	piece
2CKA001725A1463	Cover frame 1-gang white - Busch-Duro 2000 SI	2511-212-507	1	piece
2CKA001754A4498	Cover frame 1-gang studio white - future linear	1721-184K-500	1	piece
2CKA001754A4841	Cover frame 1-gang studio white - Busch-art linear	1721-44G-500	1	piece
2CKA001754A4500	Cover frame 1-gang stainless steel - Pure Stainless Steel	1721-866K-500	1	piece
2CKA001730A0191	Cover frame 1-gang alpine white - Allwetter 44 (IP 44)	2101-34	1	sztuka
2CKA001730A0281	Cover frame 1-gang alpine white - Allwetter 44 (IP 44)	2101-34-500	1	piece
2CKA001754A4173	Cover frame 1-gang studio white - future	1721-184	1	sztuka
2CKA001754A4504	Cover frame 1-gang studio white - future	1721-184-500	1	piece
2CKA001754A4331	Cover frame 1-gang studio white - Busch-axcent	1721-284	1	sztuka

2CKA001754A4437	Cover frame 1-gang white glass - Busch-axcent pur	1721-280	1	sztuka
2CKA001754A4536	Cover frame 1-gang studio white - solo	1721-84-500	1	piece
2CKA001754A4442	Cover frame 1-gang white glass - carat	1721-811	1	sztuka
2CKA001754A4600	Cover frame 1-gang ivory white - Busch-Dynasty	1721-832-500	1	piece
2CKA001754A2965	Cover frame 1-gang studio white - alpha exclusive	1721 KA-24G	1	sztuka
2CKA001754A4503	Cover frame 1-gang studio white - alpha nea	1721-24G-500	1	piece
2CKA001725A1539	Cover frame 1-gang alpine white - Reflex SI2511-214K-102-Linear	500	1	piece
2CKA001725A1549	Cover frame 1-gang white - Busch-Duro 2000 SI2511-212K-102-Linear	500	1	piece
2CKA001754A4506	Cover frame 1-gang ivory white - future linear	1721-182K-500	1	piece
2CKA001754A4168	Cover frame 1-gang ivory white - future	1721-182	1	sztuka
2CKA001754A4842	Cover frame 1-gang studio white matt - Busch-art linear	1721-44M-500	1	piece
2CKA001754A4409	Cover frame 1-gang black - Busch-axcent	1721-281	1	sztuka
2CKA001730A0258	Cover frame 1-gang white - Allwetter 44 (IP 44)	2101-32	1	sztuka
2CKA001730A0282	Cover frame 1-gang white - Allwetter 44 (IP 44)	2101-32-500	1	piece
2CKA001754A4800	Cover frame 1-gang glass black - Busch-axcent pur	1721-245	1	sztuka
2CKA001754A4322	Cover frame 1-gang glass black - carat	1721-825	1	sztuka
2CKA001754A4605	Cover frame 1-gang anthracite - Busch-Dynasty	1721-831-500	1	piece
2CKA001754A4512	Cover frame 1-gang ivory - alpha nea	1721-22G-500	1	piece
2CKA001754A4240	Cover frame 1-gang anthracite - future linear	1721-181K	1	sztuka
2CKA001754A4844	Cover frame 1-gang black matt - Busch-art linear	1721-45M-500	1	piece
2CKA001730A0275	Cover frame 1-gang brown - Allwetter 44 (IP 44)	2101-31	1	sztuka
2CKA001754A4538	Cover frame 1-gang chrome gloss - solo	1721-80G-500	1	piece
2CKA001754A4820	Cover frame 1-gang porcelain anthracite - carat	1721-815	1	sztuka
2CKA001754A4373	Cover frame 1-gang platinum - alpha exclusive	1721 KA-20	1	sztuka
2CKA001730A0276	Cover frame 1-gang aluminium silver - Allwetter 44 (IP 44)	2101-33	1	sztuka
2CKA001754A4905	Cover frame with decor ring 1-gang studio white matt / rose gold - Busch-art linear	1721-441M-500	1	piece
2CKA001754A4535	Cover frame 1-gang chrome matt - solo	1721-80-500	1	piece
2CKA001754A4254	Cover frame 1-gang stainless steel - carat	1721-860	1	sztuka
2CKA001754A4382	Cover frame 1-gang bronze - alpha exclusive	1721 KA-21	1	sztuka
2CKA001754A4529	Cover frame 1-gang aluminium silver - future linear	1721-183K-500	1	piece
2CKA001730A0225	Cover frame 1-gang anthracite - Allwetter 44 (IP 44)	2101-35	1	sztuka
2CKA001754A4907	Cover frame with decor ring 1-gang black matt / chrome - Busch-art linear	1721-456M-500	1	piece
2CKA001754A4360	Cover frame 1-gang chrome - carat	1721-826-101	1	sztuka
2CKA001754A4509	Cover frame 1-gang titanium - alpha exclusive	1721 KA-266-500	1	piece
2CKA001754A4531	Cover frame 1-gang studio white matt - future linear - matt	1721-884K-500	1	piece
2CKA001754A4906	Cover frame with decor ring 1-gang black matt / gold - Busch-art linear	1721-453M-500	1	piece
2CKA001754A4356	Cover frame 1-gang gold - carat	1721-823-101	1	sztuka
2CKA001754A4532	Cover frame 1-gang black matt - future linear - matt	1721-885K-500	1	piece
2CKA001754A4258	Cover frame 1-gang bronze - carat	1721-821	1	sztuka
2CKA001754A4334	Cover frame 1-gang yellow - Busch-axcent	1721-285	1	sztuka

2CKA001754A4775	Cover frame 1-gang glass purple - Busch-axcent pur	1721-223	1	sztuka
2CLA897100A3958	Cover frame 1-gang glass blue - Busch-art linear	1721-4028	1	piece
2CKA001754A4560	Cover frame 1-gang polished brass ivory white - Busch-Dynasty	1721-838-500	1	piece
2CKA001754A4521	Cover frame 1-gang platinum - alpha nea	1721-20-500	1	piece
2CKA001754A4337	Cover frame 1-gang green - Busch-axcent	1721-286	1	sztuka
2CKA001754A4760	Cover frame 1-gang glass sun - Busch-axcent pur	1721-225	1	sztuka
2CKA001754A4877	Cover frame 1-gang glass black - Busch-art linear	1721-4025	1	piece
2CKA001754A4570	Cover frame 1-gang polished brass decor ivory white - Busch-Dynasty	1721-836-500	1	piece
2CKA001754A4522	Cover frame 1-gang bronze - alpha nea	1721-21-500	1	piece
2CKA001754A4340	Cover frame 1-gang red - Busch-axcent	1721-287	1	sztuka
2CKA001754A4770	Cover frame 1-gang glass avocado - Busch-axcent pur	1721-226	1	sztuka
2CKA001754A4882	Cover frame 1-gang glass black / gold - Busch-art linear	1721-4013	1	piece
2CKA001754A4565	Cover frame 1-gang polished brass anthracite - Busch-Dynasty	1721-835-500	1	piece
2CKA001754A4391	Cover frame 1-gang titanium - alpha nea	1721-266	1	sztuka
2CKA001754A4343	Cover frame 1-gang blue - Busch-axcent	1721-288	1	sztuka
2CKA001754A4765	Cover frame 1-gang glass coral - Busch-axcent pur	1721-227	1	sztuka
2CKA001754A4575	Cover frame 1-gang polished brass decor anthracite - Busch-Dynasty	1721-833-500	1	piece
2CKA001754A4755	Cover frame 1-gang glass ocean - Busch-axcent pur	1721-228	1	sztuka
2CKA001754A4780	Cover frame 1-gang glass oyster - Busch-axcent pur	1721-229	1	sztuka
2CKA001754A4688	Cover frame 1-gang platinum - Busch-axcent pur	1721-270-500	1	piece
2CKA001754A4897	Cover frame 1-gang paper black - Busch-art linear	1721-4045	1	piece
2CKA001754A4580	Cover frame 1-gang antique brass ivory white - Busch-Dynasty	1721-848-500	1	piece
2CKA001754A4708	Cover frame 1-gang black matt - Busch-axcent pur	1721-275-500	1	piece
2CKA001754A4590	Cover frame 1-gang antique brass decor ivory white - Busch-Dynasty	1721-846-500	1	piece
2CKA001754A4698	Cover frame 1-gang titanium - Busch-axcent pur	1721-276-500	1	piece
2CKA001754A4585	Cover frame 1-gang antique brass anthracite - Busch-Dynasty	1721-845-500	1	piece
2CKA001754A4595	Cover frame 1-gang antique brass decor anthracite - Busch-Dynasty	1721-843-500	1	piece
2CKA001754A4790	Cover frame 1-gang paper brown - Busch-axcent pur	1721-243	1	sztuka
2CKA001754A4887	Cover frame 1-gang wood oak - Busch-art linear	1721-4083	1	piece
2CKA001754A4785	Cover frame 1-gang paper blue - Busch-axcent pur	1721-248	1	sztuka
2CKA001754A4892	Cover frame 1-gang wood walnut - Busch-art linear	1721-4086	1	piece
2CLA897100A1758	Cover frame 1-gang aluminium silver - Busch-art linear	1721-4073	1	piece
2CKA001754A4805	Cover frame 1-gang slate grey - Busch-axcent pur	1721-290	1	sztuka

2CLA897100A2958	Cover frame 1-gang slate terra rosso - Busch-art linear	1721-4097	1	piece
2CKA001754A4795	Cover frame 1-gang concrete grey - Busch-axcent pur	1721-298	1	sztuka
2CKA001725A1009	Cover frame with legend 1-gang alpine white - Reflex SI	2511 JH-214	1	sztuka
2CKA001725A0662	Cover frame with legend 1-gang white - Busch-Duro 2000 SI	2511 JH-212	1	sztuka
2CKA001725A1033	Cover frame 1-gang black - Reflex SI	2511-215	1	sztuka
2CKA001725A1563	Cover frame 1-gang red - Reflex SI	2511-217-101	1	sztuka
2CKA001725A1564	Cover frame 1-gang red - Reflex SI Linear	2511-217K-103	1	sztuka
2CKA001754A4713	Cover frame 1-gang red - future linear	1721-12-182K-101	1	sztuka
2CKA001754A4516	Cover frame 1-gang white - Busch-Duro 2000 SI	1721 NS-212-500	1	piece
2CKA001754A4527	Cover frame 1-gang studio white - future linear	1721-184 NSK-500	1	piece
2CKA001754A4065	Cover frame with labelling field, horizontal 1-gang studio white - alpha exclusive	1721 NSKA-24G	1	sztuka
2CKA001754A4496	Cover frame 1-gang alpine white - Reflex SI	1721 NS-214-500	1	piece
2CKA001754A4497	Cover frame 1-gang alpine white - Reflex SI Linear	1721 NSKA-214-500	1	piece
2CKA001754A4093	Cover frame with labelling field, horizontal 1-gang white - Busch-Duro 2000 SI Linear	1721 NSKA-212	1	sztuka
2CKA001725A1537	Cover frame 2-gang alpine white - Reflex SI	2512-214-500	1	piece
2CKA001725A1466	Cover frame 2-gang alpine white - Reflex SI	2512-214-507	1	piece
2CKA001725A1553	Cover frame 2-gang white - Busch-Duro 2000 SI	2512-212-500	1	piece
2CKA001725A1465	Cover frame 2-gang white - Busch-Duro 2000 SI	2512-212-507	1	piece
2CKA001754A4499	Cover frame 2-gang studio white - future linear	1722-184K-500	1	piece
2CKA001754A4849	Cover frame 2-gang studio white - Busch-art linear	1722-44G-500	1	piece
2CKA001754A4501	Cover frame 2-gang stainless steel - Pure Stainless Steel	1722-866K-500	1	piece
2CKA001730A0209	Cover frame 2-gang alpine white - Allwetter 44 (IP 44)	2102-34	1	sztuka
2CKA001730A0283	Cover frame 2-gang alpine white - Allwetter 44 (IP 44)	2102-34-500	1	piece
2CKA001754A4174	Cover frame 2-gang studio white - future	1722-184	1	sztuka
2CKA001754A4508	Cover frame 2-gang studio white - future	1722-184-500	1	piece
2CKA001754A4332	Cover frame 2-gang studio white - Busch-axcent	1722-284	1	sztuka
2CKA001754A4438	Cover frame 2-gang white glass - Busch-axcent pur	1722-280	1	sztuka
2CKA001754A4539	Cover frame 2-gang studio white - solo	1722-84-500	1	piece
2CKA001754A4443	Cover frame 2-gang white glass - carat	1722-811	1	sztuka
2CKA001754A4601	Cover frame 2-gang ivory white - Busch-Dynasty	1722-832-500	1	piece
2CKA001754A2999	Cover frame 2-gang studio white - alpha exclusive	1722 KA-24G	1	sztuka
2CKA001754A4511	Cover frame 2-gang studio white - alpha nea	1722-24G-500	1	piece
2CKA001754A3054	Cover frame 2-gang studio white - alpha exclusive	1732 KA-24G	1	sztuka
2CKA001754A4067	Cover frame with labelling field, vertical 2-gang studio white - alpha exclusive	1732 NSKA-24G	1	sztuka
2CKA001754A4528	Cover frame 2-gang studio white - alpha nea	1732-24G-500	1	piece
2CKA001725A1540	Cover frame 2-gang alpine white - Reflex SI Linear	2512-214K-102-500	1	piece

2CKA001725A1550	Cover frame 2-gang white - Busch-Duro 2000 SI Linear	2512-212K-102-500	1	piece
2CKA001754A4231	Cover frame 2-gang ivory white - future linear	1722-182K	1	sztuka
2CKA001754A4169	Cover frame 2-gang ivory white - future	1722-182	1	sztuka
2CKA001754A4850	Cover frame 2-gang studio white matt - Busch-art linear	1722-44M-500	1	piece
2CKA001754A4410	Cover frame 2-gang black - Busch-axcent	1722-281	1	sztuka
2CKA001730A0266	Cover frame 2-gang white - Allwetter 44 (IP 44)	2102-32	1	sztuka
2CKA001730A0284	Cover frame 2-gang white - Allwetter 44 (IP 44)	2102-32-500	1	piece
2CKA001754A4801	Cover frame 2-gang glass black - Busch-axcent pur	1722-245	1	sztuka
2CKA001754A4323	Cover frame 2-gang glass black - carat	1722-825	1	sztuka
2CKA001754A4606	Cover frame 2-gang anthracite - Busch-Dynasty	1722-831-500	1	piece
2CKA001754A3849	Cover frame 2-gang ivory - alpha exclusive	1722 KA-22G	1	sztuka
2CKA001754A3799	Cover frame 2-gang ivory - alpha nea	1722-22G	1	sztuka
2CKA001754A3864	Cover frame 2-gang ivory - alpha exclusive	1732 KA-22G	1	sztuka
2CKA001754A3757	Cover frame 2-gang ivory - alpha nea	1732-22G	1	sztuka
2CKA001754A4241	Cover frame 2-gang anthracite - future linear	1722-181K	1	sztuka
2CKA001754A4852	Cover frame 2-gang black matt - Busch-art linear	1722-45M-500	1	piece
2CKA001730A0277	Cover frame 2-gang brown - Allwetter 44 (IP 44)	2102-31	1	sztuka
2CKA001754A4327	Cover frame 2-gang chrome gloss - solo	1722-80G	1	sztuka
2CKA001754A4821	Cover frame 2-gang porcelain anthracite - carat	1722-815	1	sztuka
2CKA001754A4374	Cover frame 2-gang platinum - alpha exclusive	1722 KA-20	1	sztuka
2CKA001754A4375	Cover frame 2-gang platinum - alpha exclusive	1732 KA-20	1	sztuka
2CKA001730A0278	Cover frame 2-gang aluminium silver - Allwetter 44 (IP 44)	2102-33	1	sztuka
2CKA001754A4911	Cover frame with decor ring 2-gang studio white matt / rose gold - Busch-art linear	1722-441M-500	1	piece
2CKA001754A4537	Cover frame 2-gang chrome matt - solo	1722-80-500	1	piece
2CKA001754A4255	Cover frame 2-gang stainless steel - carat	1722-860	1	sztuka
2CKA001754A4383	Cover frame 2-gang bronze - alpha exclusive	1722 KA-21	1	sztuka
2CKA001754A4384	Cover frame 2-gang bronze - alpha exclusive	1732 KA-21	1	sztuka
2CKA001754A4530	Cover frame 2-gang aluminium silver - future linear	1722-183K-500	1	piece
2CKA001730A0233	Cover frame 2-gang anthracite - Allwetter 44 (IP 44)	2102-35	1	sztuka
2CKA001754A4913	Cover frame with decor ring 2-gang black matt / chrome - Busch-art linear	1722-456M-500	1	piece
2CKA001754A4361	Cover frame 2-gang chrome - carat	1722-826-101	1	sztuka
2CKA001754A4523	Cover frame 2-gang titanium - alpha exclusive	1722 KA-266-500	1	piece
2CKA001754A4126	Cover frame 2-gang titanium - alpha exclusive	1732 KA-266	1	sztuka
2CKA001754A4415	Cover frame 2-gang studio white matt - future linear - matt	1722-884K	1	sztuka
2CKA001754A4912	Cover frame with decor ring 2-gang black matt / gold - Busch-art linear	1722-453M-500	1	piece
2CKA001754A4357	Cover frame 2-gang gold - carat	1722-823-101	1	sztuka
2CKA001754A4534	Cover frame 2-gang black matt - future linear - matt	1722-885K-500	1	piece
2CKA001754A4259	Cover frame 2-gang bronze - carat	1722-821	1	sztuka
2CKA001754A4335	Cover frame 2-gang yellow - Busch-axcent	1722-285	1	sztuka
2CKA001754A4776	Cover frame 2-gang glass purple - Busch-axcent pur	1722-223	1	sztuka
2CLA897200A3958	Cover frame 2-gang glass blue - Busch-art linear	1722-4028	1	piece

2CKA001754A4561	Cover frame 2-gang polished brass ivory white - Busch-Dynasty	1722-838-500	1	piece
2CKA001754A4524	Cover frame 2-gang platinum - alpha nea	1722-20-500	1	piece
2CKA001754A1660	Cover frame 2-gang platinum - alpha nea	1732-20	1	sztuka
2CKA001754A4338	Cover frame 2-gang green - Busch-axcent	1722-286	1	sztuka
2CKA001754A4761	Cover frame 2-gang glass sun - Busch-axcent pur	1722-225	1	sztuka
2CKA001754A4878	Cover frame 2-gang glass black - Busch-art linear	1722-4025	1	piece
2CKA001754A4571	Cover frame 2-gang polished brass decor ivory white - Busch-Dynasty	1722-836-500	1	piece
2CKA001754A1710	Cover frame 2-gang bronze - alpha nea	1722-21	1	sztuka
2CKA001754A1751	Cover frame 2-gang bronze - alpha nea	1732-21	1	sztuka
2CKA001754A4341	Cover frame 2-gang red - Busch-axcent	1722-287	1	sztuka
2CKA001754A4771	Cover frame 2-gang glass avocado - Busch-axcent pur	1722-226	1	sztuka
2CKA001754A4883	Cover frame 2-gang glass black / gold - Busch-art linear	1722-4013	1	piece
2CKA001754A4566	Cover frame 2-gang polished brass anthracite - Busch-Dynasty	1722-835-500	1	piece
2CKA001754A4392	Cover frame 2-gang titanium - alpha nea	1722-266	1	sztuka
2CKA001754A4393	Cover frame 2-gang titanium - alpha nea	1732-266	1	sztuka
2CKA001754A4344	Cover frame 2-gang blue - Busch-axcent	1722-288	1	sztuka
2CKA001754A4766	Cover frame 2-gang glass coral - Busch-axcent pur	1722-227	1	sztuka
2CKA001754A4576	Cover frame 2-gang polished brass decor anthracite - Busch-Dynasty	1722-833-500	1	piece
2CKA001754A4756	Cover frame 2-gang glass ocean - Busch-axcent pur	1722-228	1	sztuka
2CKA001754A4781	Cover frame 2-gang glass oyster - Busch-axcent pur	1722-229	1	sztuka
2CKA001754A4689	Cover frame 2-gang platinum - Busch-axcent pur	1722-270-500	1	piece
2CKA001754A4898	Cover frame 2-gang paper black - Busch-art linear	1722-4045	1	piece
2CKA001754A4581	Cover frame 2-gang antique brass ivory white - Busch-Dynasty	1722-848-500	1	piece
2CKA001754A4709	Cover frame 2-gang black matt - Busch-axcent pur	1722-275-500	1	piece
2CKA001754A4591	Cover frame 2-gang antique brass decor ivory white - Busch-Dynasty	1722-846-500	1	piece
2CKA001754A4699	Cover frame 2-gang titanium - Busch-axcent pur	1722-276-500	1	piece
2CKA001754A4586	Cover frame 2-gang antique brass anthracite - Busch-Dynasty	1722-845-500	1	piece
2CKA001754A4596	Cover frame 2-gang antique brass decor anthracite - Busch-Dynasty	1722-843-500	1	piece
2CKA001754A4791	Cover frame 2-gang paper brown - Busch-axcent pur	1722-243	1	sztuka
2CKA001754A4888	Cover frame 2-gang wood oak - Busch-art linear	1722-4083	1	piece
2CKA001754A4786	Cover frame 2-gang paper blue - Busch-axcent pur	1722-248	1	sztuka
2CKA001754A4893	Cover frame 2-gang wood walnut - Busch-art linear	1722-4086	1	piece
2CLA897200A1758	Cover frame 2-gang aluminium silver - Busch-art linear	1722-4073	1	piece
2CKA001754A4806	Cover frame 2-gang slate grey - Busch-axcent pur	1722-290	1	sztuka

2CLA897200A2958	Cover frame 2-gang slate terra rosso - Busch-art linear	1722-4097	1	piece
2CKA001754A4796	Cover frame 2-gang concrete grey - Busch-axcent pur	1722-298	1	sztuka
2CKA001754A4117	Cover frame 2-gang palladium - alpha exclusive	1732 KA-260	1	sztuka
2CKA001754A4402	Cover frame 2-gang palladium - alpha nea	1732-260	1	sztuka
2CKA001725A1066	Cover frame 2-gang black - Reflex SI	2512-215	1	sztuka
2CKA001725A1565	Cover frame 2-gang red - Reflex SI	2512-217-101	1	sztuka
2CKA001725A1566	Cover frame 2-gang red - Reflex SI Linear	2512-217K-103	1	sztuka
2CKA001754A4714	Cover frame 2-gang red - future linear	1722-12-182K-101	1	sztuka
2CKA001754A2239	Cover frame with labelling field, vertical 2-gang white - Busch-Duro 2000 SI	1722 NS-212	1	sztuka
2CKA001754A2213	Cover frame with labelling field, horizontal 2-gang white - Busch-Duro 2000 SI	1732 NS-212	1	sztuka
2CKA001754A4368	Cover frame with labelling field, horizontal 2-gang studio white - future linear	1732-184 NSK	1	sztuka
2CKA001754A4066	Cover frame with labelling field, horizontal 2-gang studio white - alpha exclusive	1722 NSKA-24G	1	sztuka
2CKA001754A2163	Cover frame with labelling field, vertical 2-gang alpine white - Reflex SI	1722 NS-214	1	sztuka
2CKA001754A4059	Cover frame with labelling field, vertical 2-gang alpine white - Reflex SI Linear	1722 NSKA-214	1	sztuka
2CKA001754A4060	Cover frame with labelling field, horizontal 2-gang alpine white - Reflex SI Linear	1732 NSKA-214	1	sztuka
2CKA001754A4094	Cover frame with labelling field, vertical 2-gang white - Busch-Duro 2000 SI Linear	1722 NSKA-212	1	sztuka
2CKA001754A4095	Cover frame with labelling field, horizontal 2-gang white - Busch-Duro 2000 SI Linear	1732 NSKA-212	1	sztuka
2CKA001725A1538	Cover frame 3-gang alpine white - Reflex SI	2513-214-500	1	piece
2CKA001725A1554	Cover frame 3-gang white - Busch-Duro 2000 SI	2513-212-500	1	piece
2CKA001725A0639	Cover frame 3-gang white - Busch-Duro 2000 SI	2513-212-506	1	sztuka
2CKA001725A1468	Cover frame 3-gang white - Busch-Duro 2000 SI	2513-212-507	1	piece
2CKA001754A4502	Cover frame 3-gang studio white - future linear	1723-184K-500	1	piece
2CKA001754A4857	Cover frame 3-gang studio white - Busch-art linear	1723-44G-500	1	piece
2CKA001754A4319	Cover frame 3-gang stainless steel - Pure Stainless Steel	1723-866K	1	sztuka
2CKA001730A0217	Cover frame 3-gang alpine white - Allwetter 44 (IP 44)	2103-34	1	sztuka
2CKA001754A4175	Cover frame 3-gang studio white - future	1723-184	1	sztuka
2CKA001754A4333	Cover frame 3-gang studio white - Busch-axcent	1723-284	1	sztuka
2CKA001754A4439	Cover frame 3-gang white glass - Busch-axcent pur	1723-280	1	sztuka
2CKA001754A4541	Cover frame 3-gang studio white - solo	1723-84-500	1	piece
2CKA001754A4444	Cover frame 3-gang white glass - carat	1723-811	1	sztuka
2CKA001754A4602	Cover frame 3-gang ivory white - Busch-Dynasty	1723-832-500	1	piece
2CKA001754A3021	Cover frame 3-gang studio white - alpha exclusive	1723 KA-24G	1	sztuka
2CKA001754A4518	Cover frame 3-gang studio white - alpha nea	1723-24G-500	1	piece
2CKA001754A3088	Cover frame 3-gang studio white - alpha exclusive	1733 KA-24G	1	sztuka
2CKA001754A4069	Cover frame with labelling field, vertical 3-gang studio white - alpha exclusive	1733 NSKA-24G	1	sztuka
2CKA001754A2734	Cover frame 3-gang studio white - alpha nea	1733-24G	1	sztuka

2CKA001725A1541	Cover frame 3-gang alpine white - Reflex SI 2513-214K-102 Linear -500	1	piece
2CKA001725A1551	Cover frame 3-gang white - Busch-Duro 2000 2513-212K-102 SI Linear -500	1	piece
2CKA001754A4232	Cover frame 3-gang ivory white - future linear 1723-182K	1	sztuka
2CKA001754A4170	Cover frame 3-gang ivory white - future 1723-182	1	sztuka
2CKA001754A4858	Cover frame 3-gang studio white matt - Busch-art linear 1723-44M-500	1	piece
2CKA001754A4411	Cover frame 3-gang black - Busch-axcent 1723-281	1	sztuka
2CKA001730A0274	Cover frame 3-gang white - Allwetter 44 (IP 44) 2103-32	1	sztuka
2CKA001754A4802	Cover frame 3-gang glass black - Busch-axcent pur 1723-245	1	sztuka
2CKA001754A4324	Cover frame 3-gang glass black - carat 1723-825	1	sztuka
2CKA001754A4607	Cover frame 3-gang anthracite - Busch-Dynasty 1723-831-500	1	piece
2CKA001754A3856	Cover frame 3-gang ivory - alpha exclusive 1723 KA-22G	1	sztuka
2CKA001754A3807	Cover frame 3-gang ivory - alpha nea 1723-22G	1	sztuka
2CKA001754A3872	Cover frame 3-gang ivory - alpha exclusive 1733 KA-22G	1	sztuka
2CKA001754A3765	Cover frame 3-gang ivory - alpha nea 1733-22G	1	sztuka
2CKA001754A4242	Cover frame 3-gang anthracite - future linear 1723-181K	1	sztuka
2CKA001754A4860	Cover frame 3-gang black matt - Busch-art linear 1723-45M-500	1	piece
2CKA001730A0279	Cover frame 3-gang brown - Allwetter 44 (IP 44) 2103-31	1	sztuka
2CKA001754A4328	Cover frame 3-gang chrome gloss - solo 1723-80G	1	sztuka
2CKA001754A4822	Cover frame 3-gang porcelain anthracite - carat 1723-815	1	sztuka
2CKA001754A4376	Cover frame 3-gang platinum - alpha exclusive 1723 KA-20	1	sztuka
2CKA001754A4377	Cover frame 3-gang platinum - alpha exclusive 1733 KA-20	1	sztuka
2CKA001730A0280	Cover frame 3-gang aluminium silver - Allwetter 44 (IP 44) 2103-33	1	sztuka
2CKA001754A4917	Cover frame with decor ring 3-gang studio white matt / rose gold - Busch-art linear 1723-441M-500	1	piece
2CKA001754A4540	Cover frame 3-gang chrome matt - solo 1723-80-500	1	piece
2CKA001754A4256	Cover frame 3-gang stainless steel - carat 1723-860	1	sztuka
2CKA001754A4385	Cover frame 3-gang bronze - alpha exclusive 1723 KA-21	1	sztuka
2CKA001754A4386	Cover frame 3-gang bronze - alpha exclusive 1733 KA-21	1	sztuka
2CKA001754A4533	Cover frame 3-gang aluminium silver - future linear 1723-183K-500	1	piece
2CKA001730A0241	Cover frame 3-gang anthracite - Allwetter 44 (IP 44) 2103-35	1	sztuka
2CKA001754A4919	Cover frame with decor ring 3-gang black matt / chrome - Busch-art linear 1723-456M-500	1	piece
2CKA001754A4362	Cover frame 3-gang chrome - carat 1723-826-101	1	sztuka
2CKA001754A4127	Cover frame 3-gang titanium - alpha exclusive 1723 KA-266	1	sztuka
2CKA001754A4128	Cover frame 3-gang titanium - alpha exclusive 1733 KA-266	1	sztuka
2CKA001754A4416	Cover frame 3-gang studio white matt - future linear - matt 1723-884K	1	sztuka
2CKA001754A4918	Cover frame with decor ring 3-gang black matt / gold - Busch-art linear 1723-453M-500	1	piece
2CKA001754A4358	Cover frame 3-gang gold - carat 1723-823-101	1	sztuka
2CKA001754A4421	Cover frame 3-gang black matt - future linear - matt 1723-885K	1	sztuka
2CKA001754A4260	Cover frame 3-gang bronze - carat 1723-821	1	sztuka
2CKA001754A4336	Cover frame 3-gang yellow - Busch-axcent 1723-285	1	sztuka
2CKA001754A4777	Cover frame 3-gang glass purple - Busch-axcent pur 1723-223	1	sztuka

2CLA897300A3958	Cover frame 3-gang glass blue - Busch-art linear	1723-4028	1	piece
2CKA001754A4562	Cover frame 3-gang polished brass ivory white - Busch-Dynasty	1723-838-500	1	piece
2CKA001754A1637	Cover frame 3-gang platinum - alpha nea	1723-20	1	sztuka
2CKA001754A1678	Cover frame 3-gang platinum - alpha nea	1733-20	1	sztuka
2CKA001754A4339	Cover frame 3-gang green - Busch-axcent	1723-286	1	sztuka
2CKA001754A4762	Cover frame 3-gang glass sun - Busch-axcent pur	1723-225	1	sztuka
2CKA001754A4879	Cover frame 3-gang glass black - Busch-art linear	1723-4025	1	piece
2CKA001754A4572	Cover frame 3-gang polished brass decor ivory white - Busch-Dynasty	1723-836-500	1	piece
2CKA001754A1728	Cover frame 3-gang bronze - alpha nea	1723-21	1	sztuka
2CKA001754A1769	Cover frame 3-gang bronze - alpha nea	1733-21	1	sztuka
2CKA001754A4342	Cover frame 3-gang red - Busch-axcent	1723-287	1	sztuka
2CKA001754A4772	Cover frame 3-gang glass avocado - Busch-axcent pur	1723-226	1	sztuka
2CKA001754A4884	Cover frame 3-gang glass black / gold - Busch-art linear	1723-4013	1	piece
2CKA001754A4567	Cover frame 3-gang polished brass anthracite - Busch-Dynasty	1723-835-500	1	piece
2CKA001754A4394	Cover frame 3-gang titanium - alpha nea	1723-266	1	sztuka
2CKA001754A4395	Cover frame 3-gang titanium - alpha nea	1733-266	1	sztuka
2CKA001754A4345	Cover frame 3-gang blue - Busch-axcent	1723-288	1	sztuka
2CKA001754A4767	Cover frame 3-gang glass coral - Busch-axcent pur	1723-227	1	sztuka
2CKA001754A4577	Cover frame 3-gang polished brass decor anthracite - Busch-Dynasty	1723-833-500	1	piece
2CKA001754A4757	Cover frame 3-gang glass ocean - Busch-axcent pur	1723-228	1	sztuka
2CKA001754A4782	Cover frame 3-gang glass oyster - Busch-axcent pur	1723-229	1	sztuka
2CKA001754A4690	Cover frame 3-gang platinum - Busch-axcent pur	1723-270-500	1	piece
2CKA001754A4899	Cover frame 3-gang paper black - Busch-art linear	1723-4045	1	piece
2CKA001754A4582	Cover frame 3-gang antique brass ivory white - Busch-Dynasty	1723-848-500	1	piece
2CKA001754A4710	Cover frame 3-gang black matt - Busch-axcent pur	1723-275-500	1	piece
2CKA001754A4592	Cover frame 3-gang antique brass decor ivory white - Busch-Dynasty	1723-846-500	1	piece
2CKA001754A4700	Cover frame 3-gang titanium - Busch-axcent pur	1723-276-500	1	piece
2CKA001754A4587	Cover frame 3-gang antique brass anthracite - Busch-Dynasty	1723-845-500	1	piece
2CKA001754A4597	Cover frame 3-gang antique brass decor anthracite - Busch-Dynasty	1723-843-500	1	piece
2CKA001754A4792	Cover frame 3-gang paper brown - Busch-axcent pur	1723-243	1	sztuka
2CKA001754A4889	Cover frame 3-gang wood oak - Busch-art linear	1723-4083	1	piece
2CKA001754A4787	Cover frame 3-gang paper blue - Busch-axcent pur	1723-248	1	sztuka
2CKA001754A4894	Cover frame 3-gang wood walnut - Busch-art linear	1723-4086	1	piece
2CLA897300A1758	Cover frame 3-gang aluminium silver - Busch-art linear	1723-4073	1	piece

2CKA001754A4807	Cover frame 3-gang slate grey - Busch-axcent pur	1723-290	1	sztuka
2CLA897300A2958	Cover frame 3-gang slate terra rosso - Busch-art linear	1723-4097	1	piece
2CKA001754A4797	Cover frame 3-gang concrete grey - Busch-axcent pur	1723-298	1	sztuka
2CKA001754A4118	Cover frame 3-gang palladium - alpha exclusive	1723 KA-260	1	sztuka
2CKA001754A4119	Cover frame 3-gang palladium - alpha exclusive	1733 KA-260	1	sztuka
2CKA001725A1090	Cover frame 3-gang black - Reflex SI	2513-215	1	sztuka
2CKA001754A3708	Cover frame with labelling field, vertical 3-gang white - Busch-Duro 2000 SI	1723 NS-212	1	sztuka
2CKA001754A3716	Cover frame with labelling field, horizontal 3-gang white - Busch-Duro 2000 SI	1733 NS-212	1	sztuka
2CKA001754A4366	Cover frame with labelling field, vertical 3-gang studio white - future linear	1723-184 NSK	1	sztuka
2CKA001754A4369	Cover frame with labelling field, horizontal 3-gang studio white - future linear	1733-184 NSK	1	sztuka
2CKA001754A4068	Cover frame with labelling field, horizontal 3-gang studio white - alpha exclusive	1723 NSKA-24G	1	sztuka
2CKA001754A3724	Cover frame with labelling field, vertical 3-gang alpine white - Reflex SI	1723 NS-214	1	sztuka
2CKA001754A3732	Cover frame with labelling field, horizontal 3-gang alpine white - Reflex SI	1733 NS-214	1	sztuka
2CKA001754A4061	Cover frame with labelling field, vertical 3-gang alpine white - Reflex SI Linear	1723 NSKA-214	1	sztuka
2CKA001754A4062	Cover frame with labelling field, horizontal 3-gang alpine white - Reflex SI Linear	1733 NSKA-214	1	sztuka
2CKA001754A4096	Cover frame with labelling field, vertical 3-gang white - Busch-Duro 2000 SI Linear	1723 NSKA-212	1	sztuka
2CKA001754A4097	Cover frame with labelling field, horizontal 3-gang white - Busch-Duro 2000 SI Linear	1733 NSKA-212	1	sztuka
2CKA001725A1543	Cover frame 4-gang alpine white - Reflex SI	2514-214-500	1	piece
2CKA001725A0647	Cover frame 4-gang white - Busch-Duro 2000 SI	2514-212-500	1	piece
2CKA001754A4238	Cover frame 4-gang studio white - future linear	1724-184K	1	sztuka
2CKA001754A4865	Cover frame 4-gang studio white - Busch-art linear	1724-44G-500	1	piece
2CKA001754A4320	Cover frame 4-gang stainless steel - Pure Stainless Steel	1724-866K	1	sztuka
2CKA001754A4176	Cover frame 4-gang studio white - future	1724-184	1	sztuka
2CKA001754A4346	Cover frame 4-gang studio white - Busch-axcent	1724-284	1	sztuka
2CKA001754A4440	Cover frame 4-gang white glass - Busch-axcent pur	1724-280	1	sztuka
2CKA001754A4112	Cover frame 4-gang studio white - solo	1724-84	1	sztuka
2CKA001754A4445	Cover frame 4-gang white glass - carat	1724-811	1	sztuka
2CKA001754A4603	Cover frame 4-gang ivory white - Busch-Dynasty	1724-832-500	1	piece
2CKA001754A4155	Cover frame 4-gang studio white - alpha exclusive	1724 KA-24G	1	sztuka
2CKA001754A2908	Cover frame 4-gang studio white - alpha nea	1724-24G	1	sztuka
2CKA001754A4156	Cover frame 4-gang studio white - alpha exclusive	1734 KA-24G	1	sztuka
2CKA001754A2809	Cover frame 4-gang studio white - alpha nea	1734-24G	1	sztuka
2CKA001725A1497	Cover frame 4-gang alpine white - Reflex SI Linear	2514-214K-102	1	sztuka
2CKA001725A1492	Cover frame 4-gang white - Busch-Duro 2000 SI Linear	2514-212K-102	1	sztuka
2CKA001754A4233	Cover frame 4-gang ivory white - future linear	1724-182K	1	sztuka
2CKA001754A4171	Cover frame 4-gang ivory white - future	1724-182	1	sztuka

2CKA001754A4866	Cover frame 4-gang studio white matt - Busch-art linear	1724-44M-500	1	piece
2CKA001754A4412	Cover frame 4-gang black - Busch-axcent	1724-281	1	sztuka
2CKA001754A4803	Cover frame 4-gang glass black - Busch-axcent pur	1724-245	1	sztuka
2CKA001754A4325	Cover frame 4-gang glass black - carat	1724-825	1	sztuka
2CKA001754A4608	Cover frame 4-gang anthracite - Busch-Dynasty	1724-831-500	1	piece
2CKA001754A4151	Cover frame 4-gang ivory - alpha exclusive	1724 KA-22G	1	sztuka
2CKA001754A3815	Cover frame 4-gang ivory - alpha nea	1724-22G	1	sztuka
2CKA001754A4152	Cover frame 4-gang ivory - alpha exclusive	1734 KA-22G	1	sztuka
2CKA001754A3773	Cover frame 4-gang ivory - alpha nea	1734-22G	1	sztuka
2CKA001754A4243	Cover frame 4-gang anthracite - future linear	1724-181K	1	sztuka
2CKA001754A4868	Cover frame 4-gang black matt - Busch-art linear	1724-45M-500	1	piece
2CKA001754A4329	Cover frame 4-gang chrome gloss - solo	1724-80G	1	sztuka
2CKA001754A4378	Cover frame 4-gang platinum - alpha exclusive	1724 KA-20	1	sztuka
2CKA001754A4379	Cover frame 4-gang platinum - alpha exclusive	1734 KA-20	1	sztuka
2CKA001754A4923	Cover frame with decor ring 4-gang studio white matt / rose gold - Busch-art linear	1724-441M-500	1	piece
2CKA001754A4107	Cover frame 4-gang chrome matt - solo	1724-80	1	sztuka
2CKA001754A4257	Cover frame 4-gang stainless steel - carat	1724-860	1	sztuka
2CKA001754A4387	Cover frame 4-gang bronze - alpha exclusive	1724 KA-21	1	sztuka
2CKA001754A4388	Cover frame 4-gang bronze - alpha exclusive	1734 KA-21	1	sztuka
2CKA001754A4309	Cover frame 4-gang aluminium silver - future linear	1724-183K	1	sztuka
2CKA001754A4925	Cover frame with decor ring 4-gang black matt / chrome - Busch-art linear	1724-456M-500	1	piece
2CKA001754A4363	Cover frame 4-gang chrome - carat	1724-826-101	1	sztuka
2CKA001754A4129	Cover frame 4-gang titanium - alpha exclusive	1724 KA-266	1	sztuka
2CKA001754A4130	Cover frame 4-gang titanium - alpha exclusive	1734 KA-266	1	sztuka
2CKA001754A4417	Cover frame 4-gang studio white matt - future linear - matt	1724-884K	1	sztuka
2CKA001754A4924	Cover frame with decor ring 4-gang black matt / gold - Busch-art linear	1724-453M-500	1	piece
2CKA001754A4359	Cover frame 4-gang gold - carat	1724-823-101	1	sztuka
2CKA001754A4422	Cover frame 4-gang black matt - future linear - matt	1724-885K	1	sztuka
2CKA001754A4261	Cover frame 4-gang bronze - carat	1724-821	1	sztuka
2CKA001754A4348	Cover frame 4-gang yellow - Busch-axcent	1724-285	1	sztuka
2CKA001754A4778	Cover frame 4-gang glass purple - Busch-axcent pur	1724-223	1	sztuka
2CLA897400A3958	Cover frame 4-gang glass blue - Busch-art linear	1724-4028	1	piece
2CKA001754A4563	Cover frame 4-gang polished brass ivory white - Busch-Dynasty	1724-838-500	1	piece
2CKA001754A1645	Cover frame 4-gang platinum - alpha nea	1724-20	1	sztuka
2CKA001754A1686	Cover frame 4-gang platinum - alpha nea	1734-20	1	sztuka
2CKA001754A4350	Cover frame 4-gang green - Busch-axcent	1724-286	1	sztuka
2CKA001754A4763	Cover frame 4-gang glass sun - Busch-axcent pur	1724-225	1	sztuka
2CKA001754A4880	Cover frame 4-gang glass black - Busch-art linear	1724-4025	1	piece
2CKA001754A4573	Cover frame 4-gang polished brass decor ivory white - Busch-Dynasty	1724-836-500	1	piece
2CKA001754A1736	Cover frame 4-gang bronze - alpha nea	1724-21	1	sztuka
2CKA001754A1777	Cover frame 4-gang bronze - alpha nea	1734-21	1	sztuka
2CKA001754A4352	Cover frame 4-gang red - Busch-axcent	1724-287	1	sztuka

2CKA001754A4773	Cover frame 4-gang glass avocado - Busch-axcent pur	1724-226	1	sztuka
2CKA001754A4885	Cover frame 4-gang glass black / gold - Busch-art linear	1724-4013	1	piece
2CKA001754A4568	Cover frame 4-gang polished brass anthracite - Busch-Dynasty	1724-835-500	1	piece
2CKA001754A4396	Cover frame 4-gang titanium - alpha nea	1724-266	1	sztuka
2CKA001754A4397	Cover frame 4-gang titanium - alpha nea	1734-266	1	sztuka
2CKA001754A4354	Cover frame 4-gang blue - Busch-axcent	1724-288	1	sztuka
2CKA001754A4768	Cover frame 4-gang glass coral - Busch-axcent pur	1724-227	1	sztuka
2CKA001754A4578	Cover frame 4-gang polished brass decor anthracite - Busch-Dynasty	1724-833-500	1	piece
2CKA001754A4758	Cover frame 4-gang glass ocean - Busch-axcent pur	1724-228	1	sztuka
2CKA001754A4783	Cover frame 4-gang glass oyster - Busch-axcent pur	1724-229	1	sztuka
2CKA001754A4691	Cover frame 4-gang platinum - Busch-axcent pur	1724-270-500	1	piece
2CKA001754A4900	Cover frame 4-gang paper black - Busch-art linear	1724-4045	1	piece
2CKA001754A4583	Cover frame 4-gang antique brass ivory white - Busch-Dynasty	1724-848-500	1	piece
2CKA001754A4711	Cover frame 4-gang black matt - Busch-axcent pur	1724-275-500	1	piece
2CKA001754A4593	Cover frame 4-gang antique brass decor ivory white - Busch-Dynasty	1724-846-500	1	piece
2CKA001754A4701	Cover frame 4-gang titanium - Busch-axcent pur	1724-276-500	1	piece
2CKA001754A4588	Cover frame 4-gang antique brass anthracite - Busch-Dynasty	1724-845-500	1	piece
2CKA001754A4598	Cover frame 4-gang antique brass decor anthracite - Busch-Dynasty	1724-843-500	1	piece
2CKA001754A4793	Cover frame 4-gang paper brown - Busch-axcent pur	1724-243	1	sztuka
2CKA001754A4890	Cover frame 4-gang wood oak - Busch-art linear	1724-4083	1	piece
2CKA001754A4788	Cover frame 4-gang paper blue - Busch-axcent pur	1724-248	1	sztuka
2CKA001754A4895	Cover frame 4-gang wood walnut - Busch-art linear	1724-4086	1	piece
2CLA897400A1758	Cover frame 4-gang aluminium silver - Busch-art linear	1724-4073	1	piece
2CKA001754A4808	Cover frame 4-gang slate grey - Busch-axcent pur	1724-290	1	sztuka
2CLA897400A2958	Cover frame 4-gang slate terra rosso - Busch-art linear	1724-4097	1	piece
2CKA001754A4798	Cover frame 4-gang concrete grey - Busch-axcent pur	1724-298	1	sztuka
2CKA001754A4120	Cover frame 4-gang palladium - alpha exclusive	1724 KA-260	1	sztuka
2CKA001754A4121	Cover frame 4-gang palladium - alpha exclusive	1734 KA-260	1	sztuka
2CKA001754A4367	Cover frame with labelling field, vertical 4-gang studio white - future linear	1724-184 NSK	1	sztuka
2CKA001754A4370	Cover frame with labelling field, horizontal 4-gang studio white - future linear	1734-184 NSK	1	sztuka
2CKA001754A4063	Cover frame with labelling field, vertical 4-gang alpine white - Reflex SI Linear	1724 NSKA-214	1	sztuka
2CKA001754A4064	Cover frame with labelling field, horizontal 4-gang alpine white - Reflex SI Linear	1734 NSKA-214	1	sztuka
2CKA001754A4098	Cover frame with labelling field, vertical 4-gang white - Busch-Duro 2000 SI Linear	1724 NSKA-212	1	sztuka

2CKA001754A4099	Cover frame with labelling field, horizontal 4-gang white - Busch-Duro 2000 SI Linear	1734 NSKA-212	1	sztuka
2CKA001725A0969	Cover frame 5-gang alpine white - Reflex SI	2515-214	1	sztuka
2CKA001725A0654	Cover frame 5-gang white - Busch-Duro 2000 SI	2515-212-500	1	piece
2CKA001725A1467	Cover frame 5-gang white - Busch-Duro 2000 SI	2515-212-507	1	piece
2CKA001754A4517	Cover frame 5-gang studio white - future linear	1725-184K-500	1	piece
2CKA001754A4873	Cover frame 5-gang studio white - Busch-art linear	1725-44G-500	1	piece
2CKA001754A4321	Cover frame 5-gang stainless steel - Pure Stainless Steel	1725-866K	1	sztuka
2CKA001754A4177	Cover frame 5-gang studio white - future	1725-184	1	sztuka
2CKA001754A4347	Cover frame 5-gang studio white - Busch-axcent	1725-284	1	sztuka
2CKA001754A4441	Cover frame 5-gang white glass - Busch-axcent pur	1725-280	1	sztuka
2CKA001754A4113	Cover frame 5-gang studio white - solo	1725-84	1	sztuka
2CKA001754A4604	Cover frame 5-gang ivory white - Busch-Dynasty	1725-832-500	1	piece
2CKA001754A4157	Cover frame 5-gang studio white - alpha exclusive	1725 KA-24G	1	sztuka
2CKA001754A2932	Cover frame 5-gang studio white - alpha nea	1725-24G	1	sztuka
2CKA001754A4158	Cover frame 5-gang studio white - alpha exclusive	1735 KA-24G	1	sztuka
2CKA001754A2833	Cover frame 5-gang studio white - alpha nea	1735-24G	1	sztuka
2CKA001725A1498	Cover frame 5-gang alpine white - Reflex SI Linear	2515-214K-102	1	sztuka
2CKA001725A1493	Cover frame 5-gang white - Busch-Duro 2000 SI Linear	2515-212K-102	1	sztuka
2CKA001754A4234	Cover frame 5-gang ivory white - future linear	1725-182K	1	sztuka
2CKA001754A4172	Cover frame 5-gang ivory white - future	1725-182	1	sztuka
2CKA001754A4874	Cover frame 5-gang studio white matt - Busch-art linear	1725-44M-500	1	piece
2CKA001754A4413	Cover frame 5-gang black - Busch-axcent	1725-281	1	sztuka
2CKA001754A4804	Cover frame 5-gang glass black - Busch-axcent pur	1725-245	1	sztuka
2CKA001754A4609	Cover frame 5-gang anthracite - Busch-Dynasty	1725-831-500	1	piece
2CKA001754A4153	Cover frame 5-gang ivory - alpha exclusive	1725 KA-22G	1	sztuka
2CKA001754A3823	Cover frame 5-gang ivory - alpha nea	1725-22G	1	sztuka
2CKA001754A4154	Cover frame 5-gang ivory - alpha exclusive	1735 KA-22G	1	sztuka
2CKA001754A3781	Cover frame 5-gang ivory - alpha nea	1735-22G	1	sztuka
2CKA001754A4244	Cover frame 5-gang anthracite - future linear	1725-181K	1	sztuka
2CKA001754A4876	Cover frame 5-gang black matt - Busch-art linear	1725-45M-500	1	piece
2CKA001754A4330	Cover frame 5-gang chrome gloss - solo	1725-80G	1	sztuka
2CKA001754A4380	Cover frame 5-gang platinum - alpha exclusive	1725 KA-20	1	sztuka
2CKA001754A4381	Cover frame 5-gang platinum - alpha exclusive	1735 KA-20	1	sztuka
2CKA001754A4929	Cover frame with decor ring 5-gang studio white matt / rose gold - Busch-art linear	1725-441M-500	1	piece
2CKA001754A4108	Cover frame 5-gang chrome matt - solo	1725-80	1	sztuka
2CKA001754A4389	Cover frame 5-gang bronze - alpha exclusive	1725 KA-21	1	sztuka
2CKA001754A4390	Cover frame 5-gang bronze - alpha exclusive	1735 KA-21	1	sztuka
2CKA001754A4310	Cover frame 5-gang aluminium silver - future linear	1725-183K	1	sztuka
2CKA001754A4931	Cover frame with decor ring 5-gang black matt / chrome - Busch-art linear	1725-456M-500	1	piece

2CKA001754A4131	Cover frame 5-gang titanium - alpha exclusive	1725 KA-266	1	sztuka
2CKA001754A4132	Cover frame 5-gang titanium - alpha exclusive	1735 KA-266	1	sztuka
2CKA001754A4418	Cover frame 5-gang studio white matt - future linear - matt	1725-884K	1	sztuka
2CKA001754A4930	Cover frame with decor ring 5-gang black matt / gold - Busch-art linear	1725-453M-500	1	piece
2CKA001754A4423	Cover frame 5-gang black matt - future linear - matt	1725-885K	1	sztuka
2CKA001754A4349	Cover frame 5-gang yellow - Busch-axcent	1725-285	1	sztuka
2CKA001754A4779	Cover frame 5-gang glass purple - Busch-axcent pur	1725-223	1	sztuka
2CLA897500A3958	Cover frame 5-gang glass blue - Busch-art linear	1725-4028	1	piece
2CKA001754A4564	Cover frame 5-gang polished brass ivory white - Busch-Dynasty	1725-838-500	1	piece
2CKA001754A1652	Cover frame 5-gang platinum - alpha nea	1725-20	1	sztuka
2CKA001754A1694	Cover frame 5-gang platinum - alpha nea	1735-20	1	sztuka
2CKA001754A4351	Cover frame 5-gang green - Busch-axcent	1725-286	1	sztuka
2CKA001754A4764	Cover frame 5-gang glass sun - Busch-axcent pur	1725-225	1	sztuka
2CKA001754A4881	Cover frame 5-gang glass black - Busch-art linear	1725-4025	1	piece
2CKA001754A4574	Cover frame 5-gang polished brass decor ivory white - Busch-Dynasty	1725-836-500	1	piece
2CKA001754A1744	Cover frame 5-gang bronze - alpha nea	1725-21	1	sztuka
2CKA001754A1785	Cover frame 5-gang bronze - alpha nea	1735-21	1	sztuka
2CKA001754A4353	Cover frame 5-gang red - Busch-axcent	1725-287	1	sztuka
2CKA001754A4774	Cover frame 5-gang glass avocado - Busch-axcent pur	1725-226	1	sztuka
2CKA001754A4886	Cover frame 5-gang glass black / gold - Busch-art linear	1725-4013	1	piece
2CKA001754A4569	Cover frame 5-gang polished brass anthracite - Busch-Dynasty	1725-835-500	1	piece
2CKA001754A4398	Cover frame 5-gang titanium - alpha nea	1725-266	1	sztuka
2CKA001754A4399	Cover frame 5-gang titanium - alpha nea	1735-266	1	sztuka
2CKA001754A4355	Cover frame 5-gang blue - Busch-axcent	1725-288	1	sztuka
2CKA001754A4769	Cover frame 5-gang glass coral - Busch-axcent pur	1725-227	1	sztuka
2CKA001754A4579	Cover frame 5-gang polished brass decor anthracite - Busch-Dynasty	1725-833-500	1	piece
2CKA001754A4759	Cover frame 5-gang glass ocean - Busch-axcent pur	1725-228	1	sztuka
2CKA001754A4784	Cover frame 5-gang glass oyster - Busch-axcent pur	1725-229	1	sztuka
2CKA001754A4692	Cover frame 5-gang platinum - Busch-axcent pur	1725-270-500	1	piece
2CKA001754A4901	Cover frame 5-gang paper black - Busch-art linear	1725-4045	1	piece
2CKA001754A4584	Cover frame 5-gang antique brass ivory white - Busch-Dynasty	1725-848-500	1	piece
2CKA001754A4712	Cover frame 5-gang black matt - Busch-axcent pur	1725-275-500	1	piece
2CKA001754A4594	Cover frame 5-gang antique brass decor ivory white - Busch-Dynasty	1725-846-500	1	piece
2CKA001754A4702	Cover frame 5-gang titanium - Busch-axcent pur	1725-276-500	1	piece
2CKA001754A4589	Cover frame 5-gang antique brass anthracite - Busch-Dynasty	1725-845-500	1	piece
2CKA001754A4599	Cover frame 5-gang antique brass decor anthracite - Busch-Dynasty	1725-843-500	1	piece

2CKA001754A4794	Cover frame 5-gang paper brown - Busch-axcent pur	1725-243	1	sztuka
2CKA001754A4891	Cover frame 5-gang wood oak - Busch-art linear	1725-4083	1	piece
2CKA001754A4789	Cover frame 5-gang paper blue - Busch-axcent pur	1725-248	1	sztuka
2CKA001754A4896	Cover frame 5-gang wood walnut - Busch-art linear	1725-4086	1	piece
2CLA897500A1758	Cover frame 5-gang aluminium silver - Busch-art linear	1725-4073	1	piece
2CKA001754A4809	Cover frame 5-gang slate grey - Busch-axcent pur	1725-290	1	sztuka
2CLA897500A2958	Cover frame 5-gang slate terra rosso - Busch-art linear	1725-4097	1	piece
2CKA001754A4799	Cover frame 5-gang concrete grey - Busch-axcent pur	1725-298	1	sztuka
2CKA001754A4122	Cover frame 5-gang palladium - alpha exclusive	1725 KA-260	1	sztuka
2CKA001754A4123	Cover frame 5-gang palladium - alpha exclusive	1735 KA-260	1	sztuka
2CKA001754A4408	Cover frame 5-gang palladium - alpha nea	1735-260	1	sztuka

Kategorie

Produkty niskiego napięcia i systemy → Wiring Accessories - Light Switch Ranges → Flush Mounted Inserts → Mechanical Inserts

